



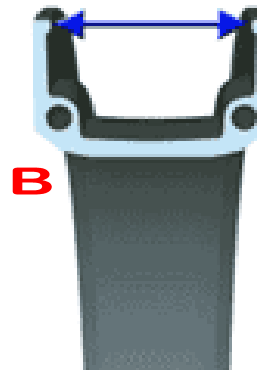

Following the simple instructions below will allow you to identify the correct size of insert to best suit your tyre.

1. Remove the tyre from the wheel.
2. Insert the product into the tyre and pinch the beads together as shown in fig:A
3. Measure across the outside edge of the bead - as indicated by the yellow arrow in fig:A
4. Take the wheel rim and measure across the inside (rim to rim) as indicated in fig:B

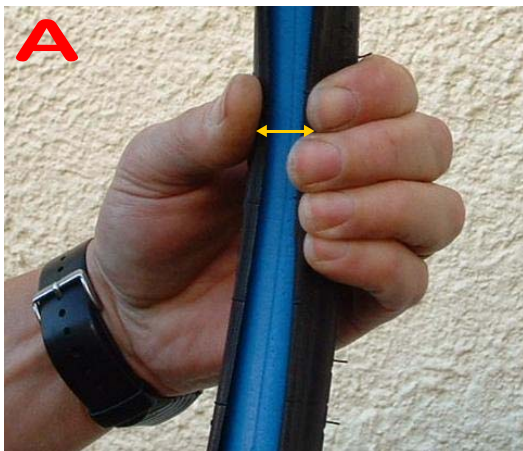

The resulting measurements from Fig: A /Fig:B should be very close, within approximately 2mm. If the difference in A/B is more or less than 2mm then the fit will be too tight or too loose.

Please contact us at any time if you wish to discuss any aspect of the product.

The fitting procedure of both Centipede and Toobz is available as a pdf download from our website.

