




Fitting Guide

Step 1


Remove the tyre and tube from the wheel. Clean the rim thoroughly, check the tyre bead and wall for any damage and replace if necessary.

Refit the tyre HALF-WAY onto the rim ready to insert the Toobz/Centipede.

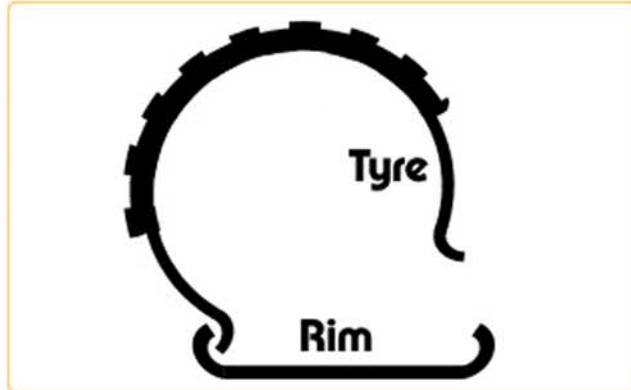


Step 2

Fit the airless Toobz/Centipede into the whole tyre and push back into the rim.

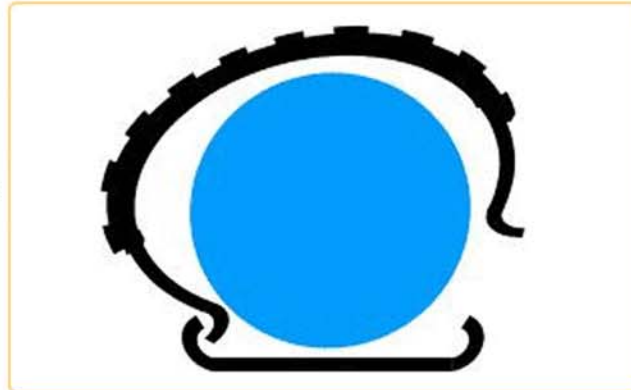


Step 3

Using the levers fit the Toobz.Centipede into the well of the rim making sure that the tyre bead on the opposite side fits under the clincher. That is the part of the rim that retains the tyre bead.

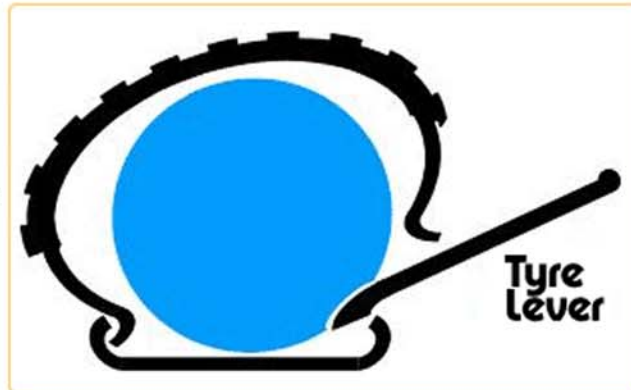

Step 4

Carefully fit the tyre over the rim using up to 3 levers, moving a small distance at a time. Be patient as you move around the rim being sure to seat the bead properly.

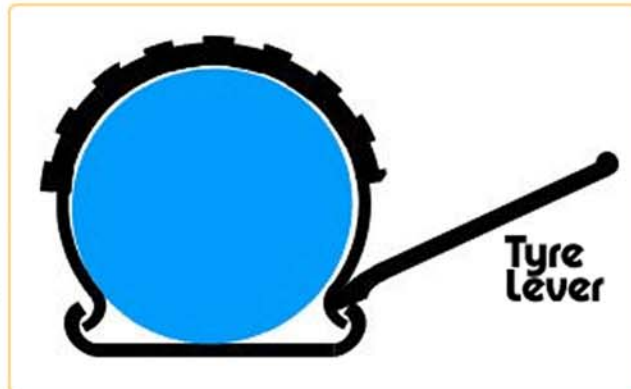

Quick Contact

Telephone or Fax:
During normal office hours
Tuesday to Saturday
(UK) 0800 197 1961
(International) ++ 44 1404 47211

Email:
enquiries@stopaflat.com

If you encounter any problems while fitting your Toobz/Centipede products, please do not hesitate to contact us on the number above for help and guidance.